

BUBBLE MACHINE OPERATING INSTRUCTIONS

Thank you for hiring our Bubble Machine. Please carefully read the following details for safe & proper operations.

CAUTION

- Do not stop the bubble wheel by force, this will damage the inside motor!
- Be particularly careful not to insert fingers etc. into the turning bubble wheel

OPERATION

- Put the bubble machine on a flat & firm surface, then carefully fill Bubble Liquid into the front side tank
- For proper output, make sure that that bottom bubble wheel rings are completely covered with liquid
- Do not fill too much liquid into the tank – stop 5 cm below tank top edge to avoid overflow & internal damage
- Only use the proper Bubble Fluid provided – the machine CANNOT run with water only or other unqualified liquids!
- Connect the power cable to your mains socket
- Switch the machine on via the housing backside on/off switch. The bubble wheel will start turning & blowing bubbles
- When finished, disconnect power & remove all bubble liquid from the tank and rinse with warm water and wipe down with a soft, damp cloth.

TROUBLESHOOTING

If the Bubble Wheel doesn't turn, check that:

- The plug is properly connected to the mains socket & that the item is switched on
- No packing materials or other parts are blocking the wheel movement

If the bubble wheel is turning but no bubbles coming out, check that there is enough liquid inside the tank & that you use the bubble fluid provided. The unit cannot operate with water or unqualified liquids

TECHNICAL SPECIFICATIONS: Power: 240Vac / 50Hz